



T631-2

Pro1 Technologies, Inc.

1111 S. Glenstone Ave., Suite 2-100
Springfield, MO 65804

Toll-Free: 888-776-1427 **Web:** www.pro1iaq.com
Hours of Operation: M-F 9AM - 6PM Eastern



Caution:

Equipment damage hazard
Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

Table of Contents


Page

Thermostat Quick Reference	2
Thermostat Operation	3
Warranty Registration	4


Una versión en español de este manual se puede descargar en la página web de la compañía.

THERMOSTAT QUICK REFERENCE

Getting to know your thermostat

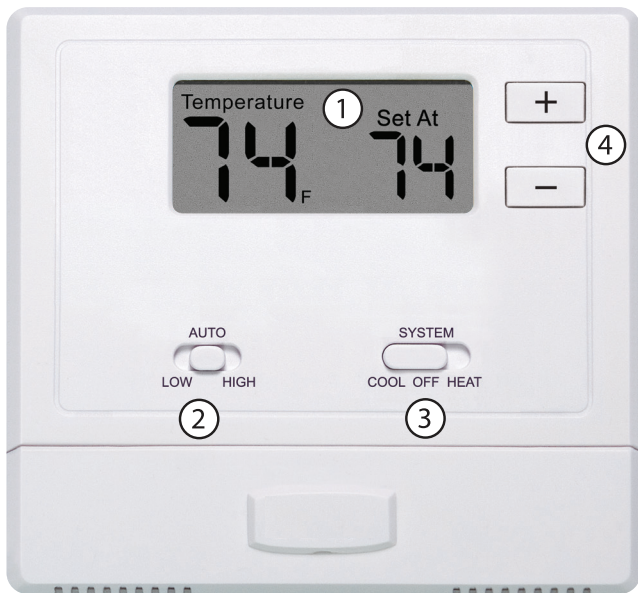

① LCD

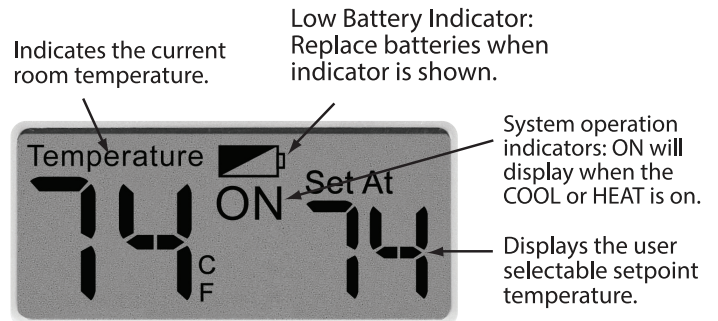

Note: Compressor Delay Flashing "ON".

- ② Fan Switch
- ③ System Switch
- ④ Set-point Buttons




Important:

The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable.


Battery Installation

Battery installation is optional if thermostat is hardwired (R and C terminal connected to 24v power).

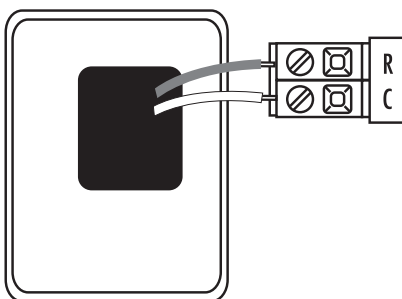


 

Insert 2 AA Alkaline batteries (included). High quality alkaline batteries are recommended.

Easy to use controls

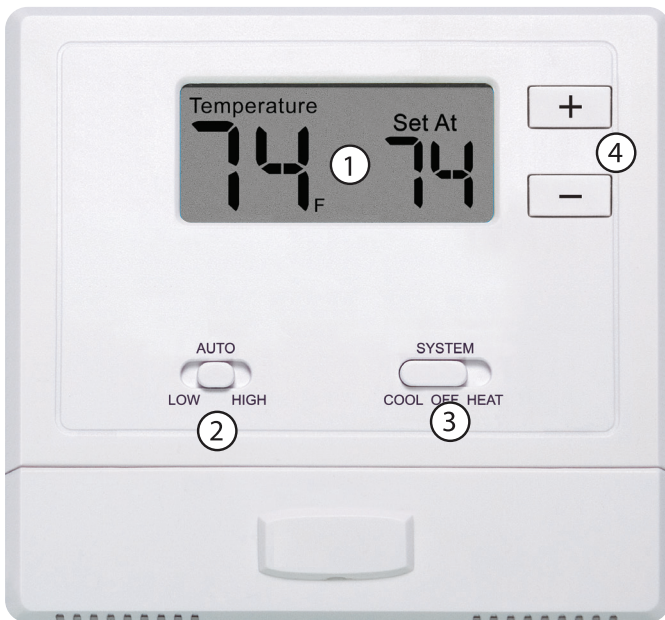

Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- ① **LCD Display:**
See page 2 for details about this display read out.
- ② **Fan Switch:**
AUTO will cycle the fan on only when the heating or cooling system is on. Select LOW or HIGH for the fan to run continuously at the selected speed.
- ③ **System Switch:**
Selects the operation mode of your HVAC system. Selecting HEAT turns on the heat mode. Selecting COOL turns on the air conditioning mode. Selecting OFF turns both heating and cooling off.
- ④ **Temperature Setpoint Buttons:**
Press the  or  buttons to select the desired room temperature.

A Note About Two-Speed Fan:

When the fan switch is set to AUTO and the system is in HEAT or COOL, the thermostat will switch from LOW fan to HIGH fan when the ambient temperature is 2x swing away from setpoint. The thermostat will switch back to LOW fan at 1x swing away from setpoint.


Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

① Go to our website, and fill out a short registration form.

- or -

② Complete the form below and mail it to the address shown.



Warranty Registration:

Name: _____

Thermostat Model: _____

Address: _____

Date Installed: _____

City: _____

Complete form and mail to:

State: _____

Thermostat Warranty Registration

Zip: _____

1111 S. Glenstone

Suite 2-100

Springfield, MO 65804